



TALKING TIN – RED 20362




CONTENTS

- 1 x Talking Tin – Red (with batteries already installed)


BEFORE USE

To record a message

1. Pull the tab on the rear of the 'Tin' to activate the battery power.
2. Hold the 'Tin' in both hands with your thumbs over the two record buttons.

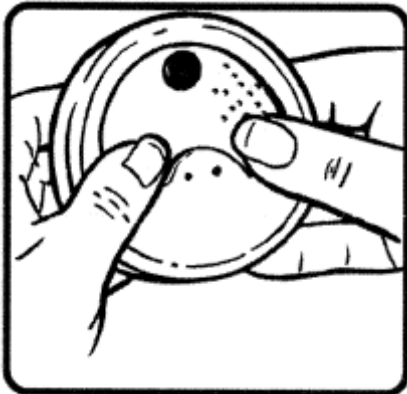


3. Press down with your thumbs and the red light will illuminate to indicate that recording has begun. Make sure that both your thumbs remain pressed down so that the red light remains on whilst you are recording. Speak clearly at a distance of approximately 15cm (6") and release your thumbs when you have finished recording.

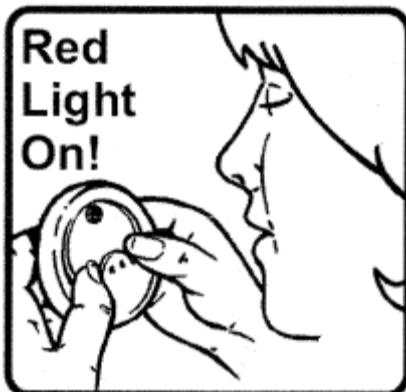

This product will allow you to record one single 40 second message. You can re-record as many times as you wish. New recorded messages will override previous messages.

If you wish to protect the message you have recorded, slide the switch on the back to the LOCK position.

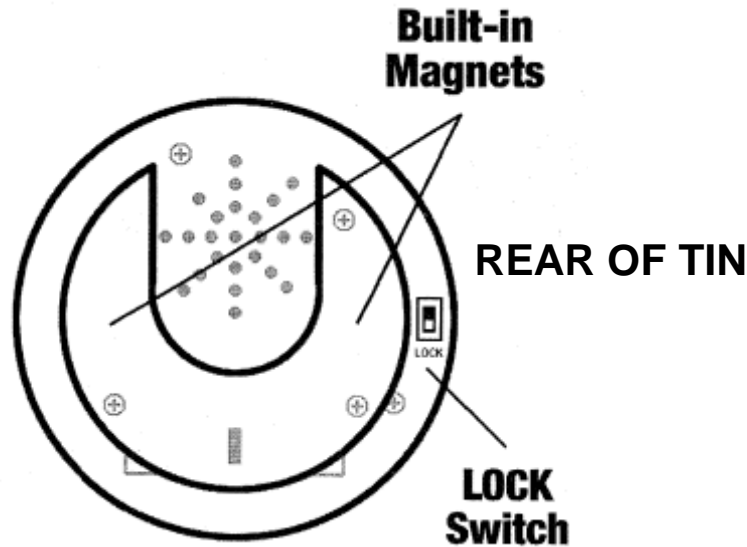

The LOCK switch stops the recording function from being activated. Remember to slide the switch back again when do eventually wish to change the message.

OPERATION

To play a message

1. Press the PLAY button once to hear your message.



2. There is NOT a volume control.

The magnets in the product allow the Talking Tin to be attached to a can or tin. This can be a practical aid for verbally 'labelling' the contents of tins for the visually impaired.

There is a 2.4cm wide and 3mm high gap between the U section at the rear of the product and the 'Tin' itself. This allows a thin belt or a piece of elastic to be passed through the Talking Tin to allow the product to be carried. It also allows the Talking Tin to be tied to an object e.g. a bottle.




SAFETY

Always supervise the use of this product.


CARE AND MAINTENANCE

To replace Batteries


1. Each Talking Tin requires three AG13 (LR44) button cell batteries. With the rear of the 'Tin' uppermost, remove the U shaped section by loosening the three screws.

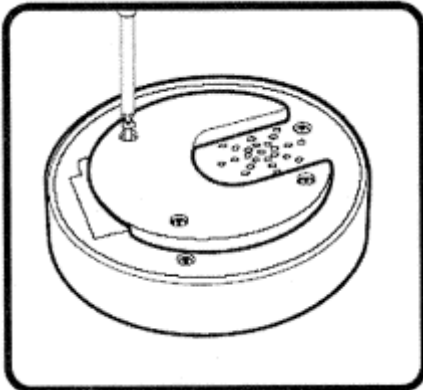

2. Remove the screw holding the battery compartment cover.

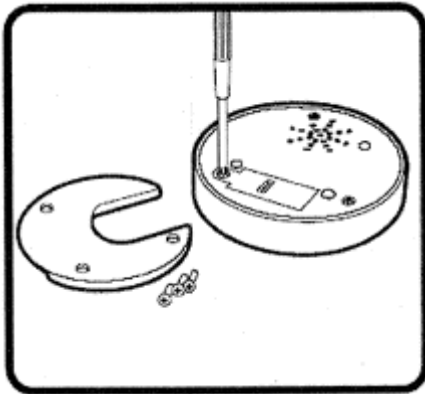

3. Replace all three batteries, observing the polarity required.

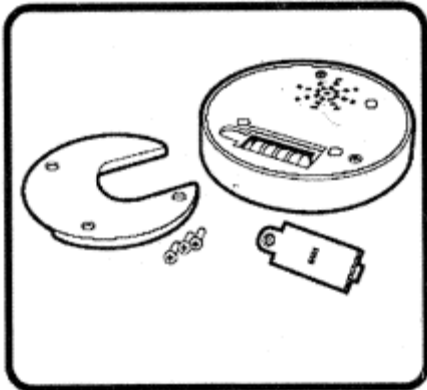

4. Replace the battery compartment cover and screws.
5. Use Alkaline batteries only.
6. Do not mix old and new batteries.


To clean

Wipe with a soft, barely moistened cloth. Avoid abrasive and harsh cleaning products as these will scratch the plastic.


Keep dry.

Once this product is eventually exhausted, please dispose of it appropriately.

SPECIFICATION

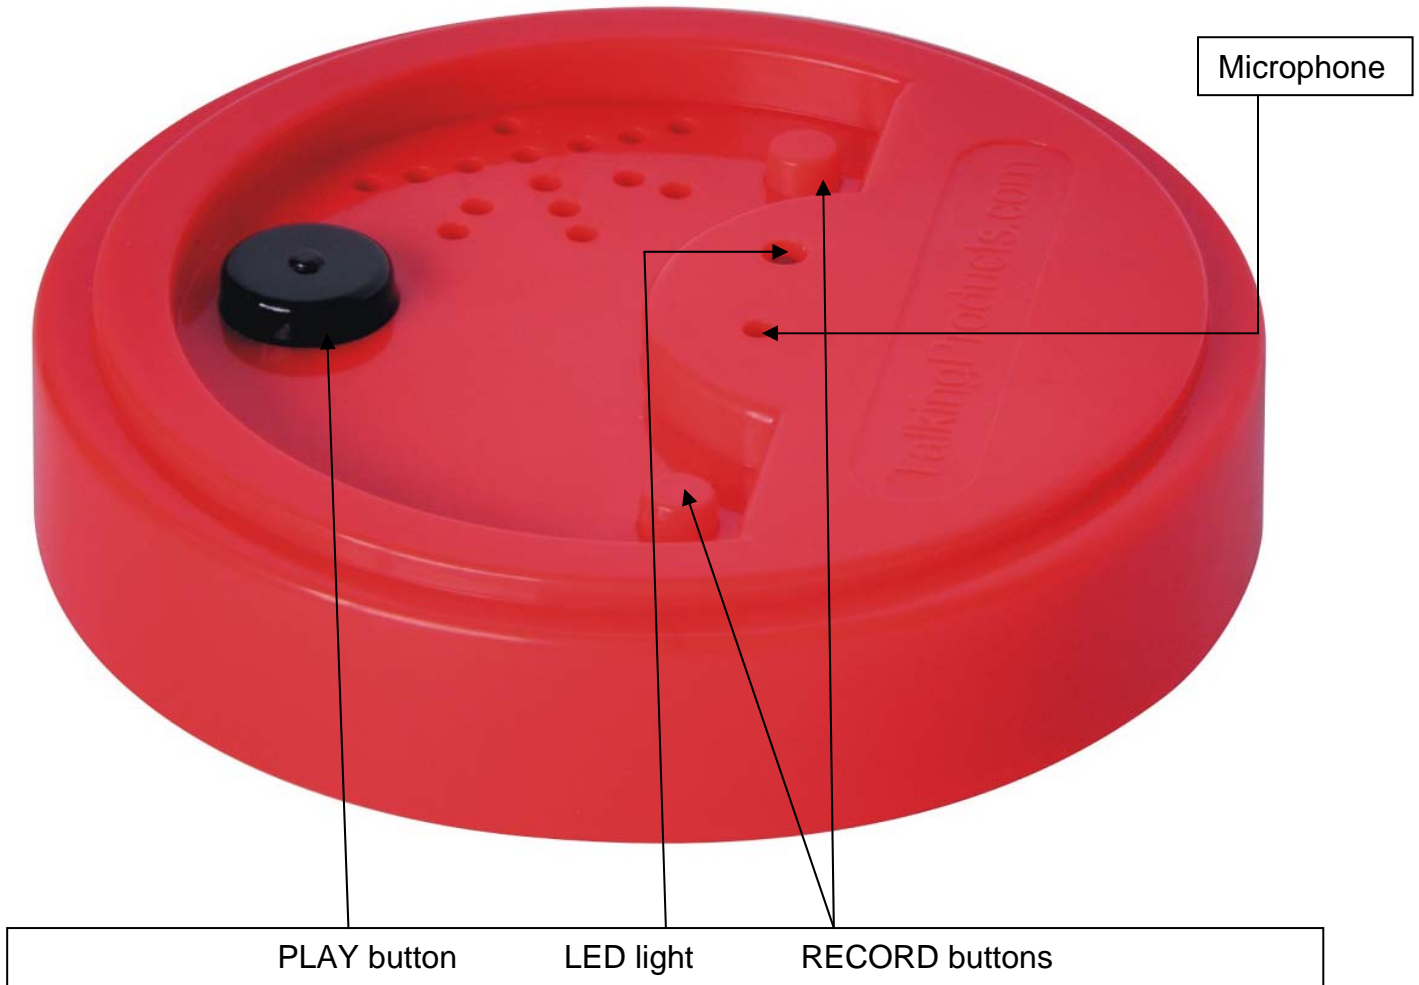

REAR OF TIN

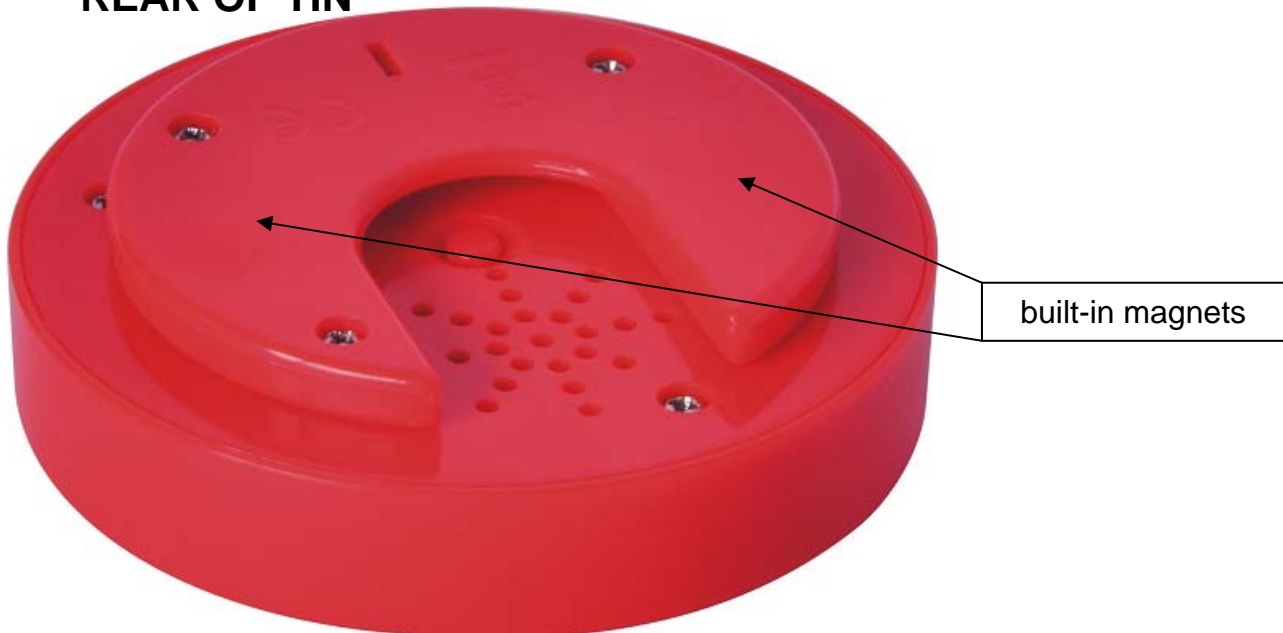

Further copies of these instructions can be downloaded at www.rompa.com
We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com



LATA FALANTE – VERMELHO 20362



 
CONTEÚDO

1 x Lata falante – Vermelho (com pilhas instaladas)

ANTES DE UTILIZAR

Para gravar a mensagem

1. Puxe a aba na parte de trás da 'lata' para ativar as pilhas.
2. Segure a 'lata' com as duas mãos e com os polegares em cima dos dois botões de gravação.

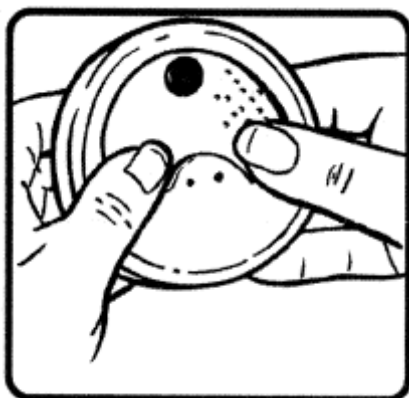


3. Pressione com os polegares e uma luz vermelha acende indicando que a gravação começou. Deve manter os dois polegares pressionados para que a luz se mantenha acesa durante a gravação. Fale claramente a uma distância de aproximadamente 15cm e solte os polegares quando terminar a gravação.



Este produto permite-lhe gravar uma mensagem simples de 40 segundos. Pode regravar as vezes que quiser. As novas mensagens vão apagar as mensagens anteriores.

 O botão de bloqueio na parte de trás da lata falante serve para evitar que as mensagens gravadas sejam apagadas acidentalmente.

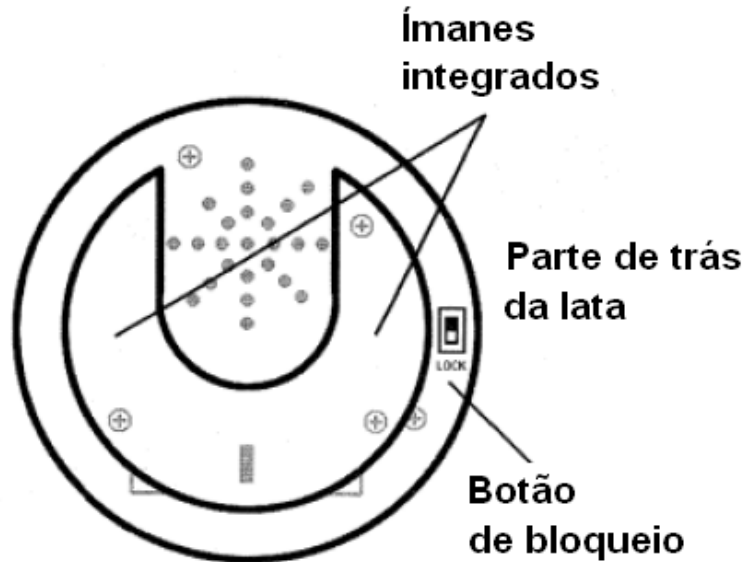


O botão de bloqueio impede que a função de gravação seja ativada. Não se esqueça de mudar a posição do botão quando eventualmente quiser alterar a mensagem.

FUNCIONAMENTO

Para reproduzir uma mensagem

 1. Pressione PLAY uma vez para ouvir a sua mensagem.

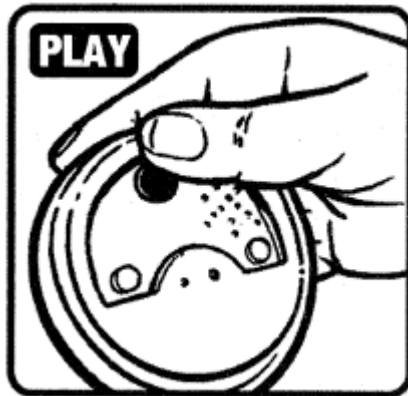

2. Não existe controlo de volume.

Os ímãs neste produto permitem que a lata falante possa ser fixada numa lata ou objeto metálico. Isto pode ser uma ajuda prática para colocar uma “etiqueta” falada, dando informação sobre o conteúdo a pessoas com dificuldades de visão.



Existe uma folga com 2.4cm na largura e 3mm na altura entre a secção em U na parte de trás do produto e a 'lata'. Isto permite passar uma cinta ou elástico através da lata falante para transportar este produto. Isto também permite que a lata falante seja atada a um objeto, ex: uma garrafa.

 
SEGURANÇA

Supervisione sempre a utilização deste produto.


CUIDADO E MANUTENÇÃO

Substituir as pilhas


1. Cada lata falante requer três pilhas AG13 (LR44). Com a parte de trás da lata virada para cima, remova a secção U desapertando os três parafusos.

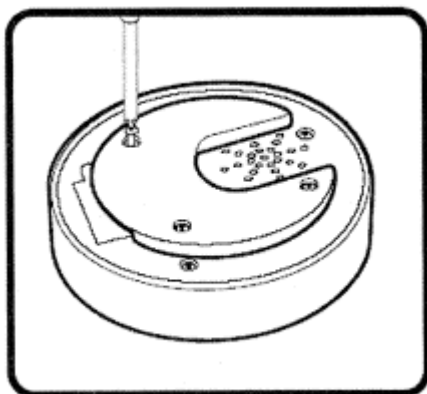

 2. Remova o parafuso que segura o compartimento das pilhas.

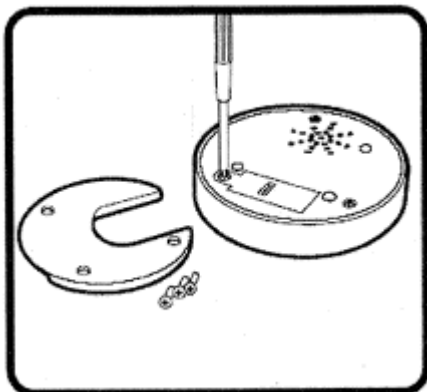

 3. Substitua as três pilhas, observando a polaridade indicada.

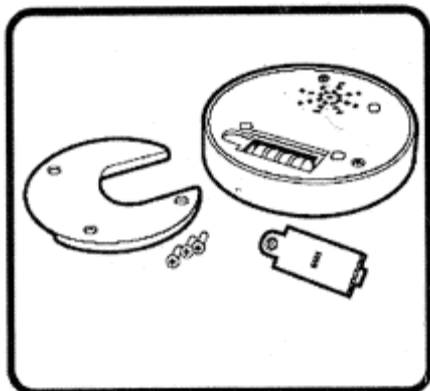


4. Volte a colocar a tampa do compartimento das pilhas e parafusos.
5. Utilize apenas pilhas alcalinas.
6. Não misture pilhas velhas com pilhas novas.

Para limpar

Limpe com um pano macio e ligeiramente humedecido. Evite abrasivos e produtos de limpeza agressivos pois estes podem riscar o plástico.

Mantenha seco.

 Quando este produto eventualmente estiver gasto, deposite-o num local apropriado.

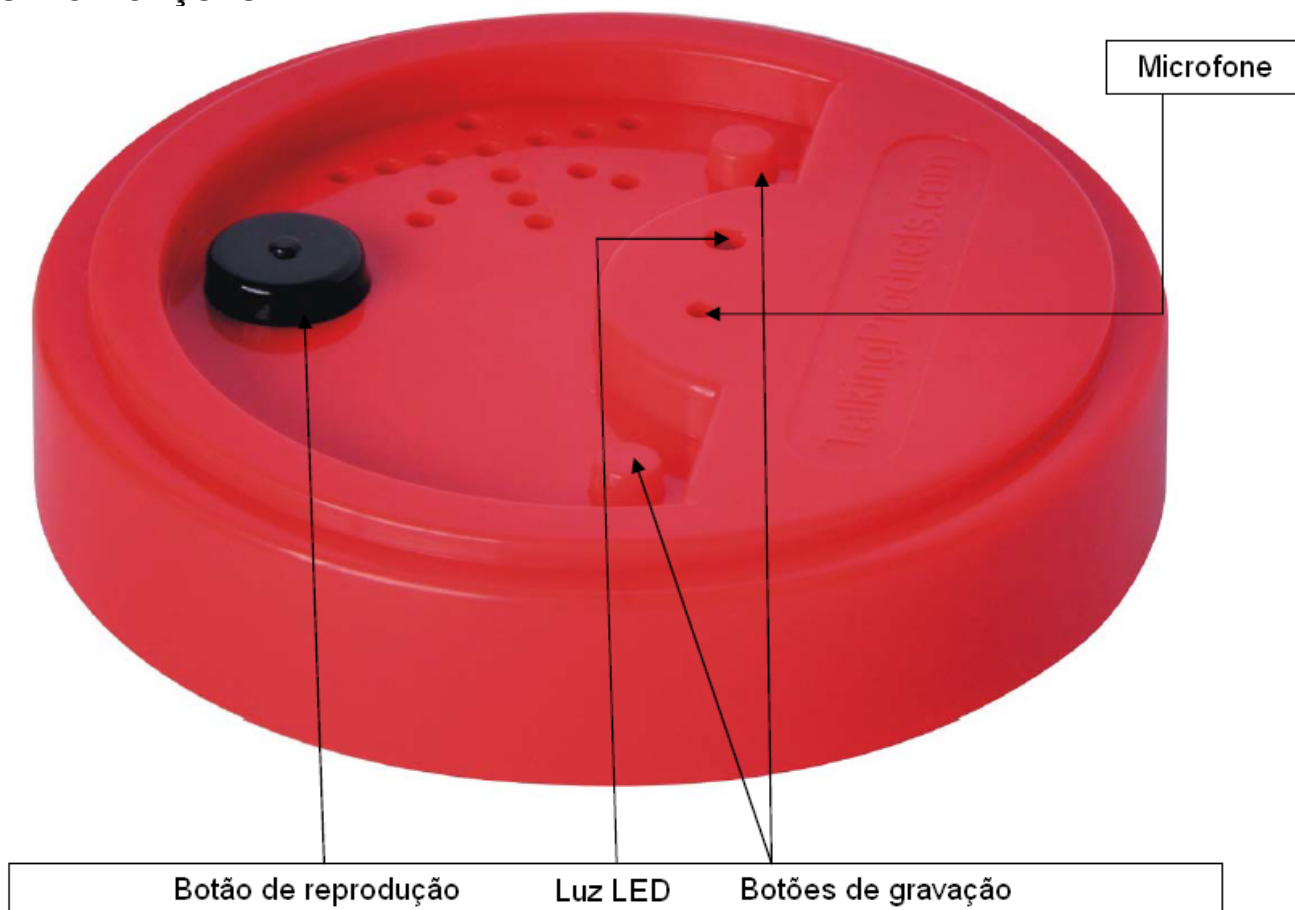ESPECIFICAÇÕES**PARTE DE TRÁS DA LATA
REAR OF TIN**