



## 1. Product Name

Wi Fi LED Furniture

## 2. Product Code

21000 – Chair

21001 - Cube

## 3. Colour

Frosted white (until illuminated)

## 4. Brief Description

For indoors or out, including water environments. Control the colours of these contemporary modules using any of our Wi Fi controllers.

## 5. Contents

- 1 x chair / cube
- 1 x charger

## 6. Snoezelen® Stimulations

- Sight

## 7. Best Use

Use in a darkened environment, with a Wi Fi controller for maximum visual impact.

## 8. Compatible ROMPA® Products

Wi Fi controllers (see below)

## 9. Starting Up

- Plug the charger into mains socket and charge.
- Disconnect charger and use passively or interactively.

## 10. Detailed Description

For indoors or out, including water environments. Control the colours of these contemporary modules using any of our Wi Fi controllers. A fantastic – and safe – way to introduce colour, light and interactivity into your garden, pool area or sensory room. Rigid plastic. Rechargeable.

## 11. Safety

- Always supervise the use of this product.
- Whilst the chair and cube may be used outside and in damp environments, the charger is for indoor use only.
- Use the socket cover in the underside of the furniture to make sure that water cannot get into the insides of the furniture.

## 12. Technical Specification

	<b>Chair</b>	<b>Cube</b>
Approx. size:	80 x 55cm	40 x 40 x 40cm
Approx. weight:	10kg	5kg

### **Charger:**

Model: DK7-048-0900-BS  
Input: 100-240V ~ 50-60Hz 0.2A  
Output: +4 8V= 0.9A  
CE: meets the requirements of CE (charger BS EN 60950-1): Double isolated



## 13. Installation

1. Choose a safe and suitable location for your furniture.
2. The furniture may have a small charge already, but we recommend that the furniture be charged on receipt. Connect the charger to the socket in the underside of the furniture and plug the charger in. Before charging, it may be necessary to unscrew the socket cap cover (that stops moisture getting inside the furniture). It may be advisable to leave the furniture charging overnight.
3. Always replace the socket cap cover after charging.
4. Switch ON (red button). Switch OFF after use.

### **OPERATION**

The lighting inside the furniture will fade through a variety of colours unless a ROMPA® Wi Fi controller is used to specifically select a colour.

### **Wi Fi controlled operation**


This unit is Wi Fi compatible, and therefore will respond wirelessly to the following products:

- 18870, 20402 - Talking Cubes
- 19214 - Colour Changing Panel
- 19847, 21006 - 8 Colour Wirefree Controllers
- 19939 – Wi Fi Interactive Carpet Switch Set
- 20563 – Wi Fi Microphone by ROMPA®
- Sensory Magic Touch Screen



## 14. Care and Maintenance

- Charge as soon as operation becomes erratic. Do not store the furniture when fully discharged – get into the practice of recharging the furniture after use. Failure to do so may damage the product irrevocably. If the furniture is to be stored for significant periods of time, it should be switched on periodically, allowed to discharge, then recharged. This will ensure optimum battery performance.
- This product contains LEDs so there will be no need to change any bulbs or lamps
- Once this product is eventually exhausted, please dispose of it appropriately
- Never immerse this product in water
- Always replace the cap cover on the socket

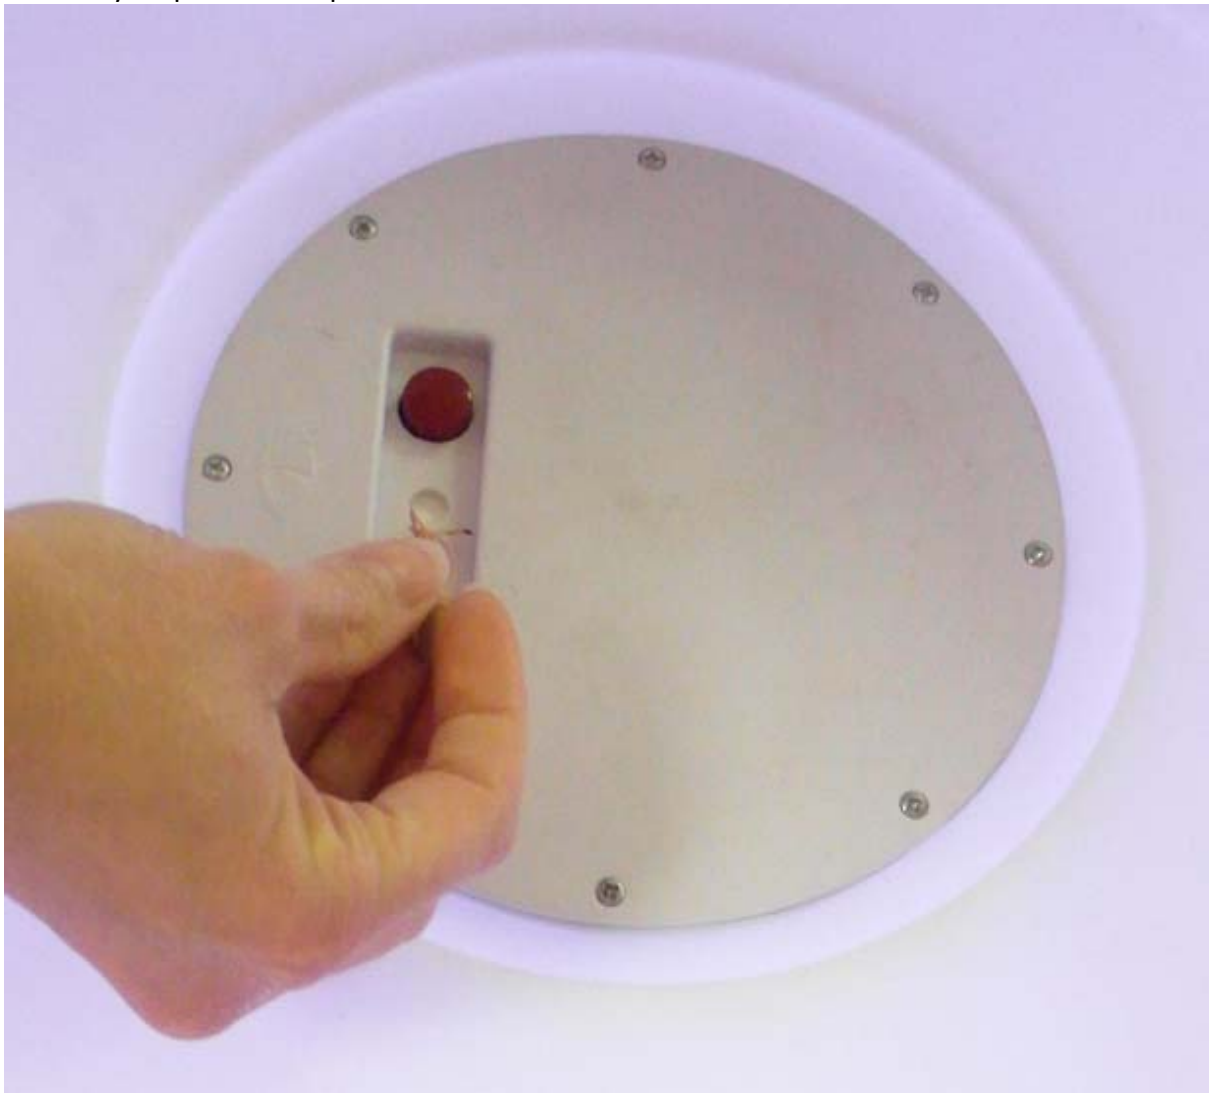

- Store in cool, dry conditions (i.e. bring back indoors after use) but do not use/store below freezing or above 50°C.

## 15. Troubleshooting

*Problem: **The chair / cube will not light up?***

- Charge the chair / cube fully

Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at [producthelp@rompa.com](mailto:producthelp@rompa.com)