



1. Product Name

Fibre Optic Torch

2. Product Code

21936

3. Colour

As shown

4. Brief Description

A compact and portable light source with a mini multi-texture fibre optic harness.

5. Contents

1 x colour changing torch
1 x mini multi-texture fibre optic harness
1 x Allen key
3 AAA batteries

6. Snoezelen® Stimulations

- Sight

7. Best Use

Use in a darkened environment to experience all the different lighting effects effectively.

8. Compatible ROMPA® Products

ROMPA® have a large range of products to provide different lighting effects and alternative types of fixed fibre optics.

9. Starting Up

- Insert Batteries
- Secure harness securely
- Switch on
- Choose mode of operation

10. Detailed Description

A compact and portable light source with a mini multi-texture fibre optic harness. As this does not need plugging into the mains, this can be easily moved from room to room, and is light-weight enough for many clients to be able to hold safely to enjoy light comfortably.

With different colour, step and fade modes of operation. Includes 3 AAA batteries. Accommodates our other fibre optic harnesses although larger options are not recommended for use with this torch.

11. Safety

- Always supervise the use of this product
- For indoor use only.
- This product is not a toy.

12. Technical Specification

- Material: Aluminium Alloy
- Change Mode: 10 colours and Flash and Fade modes
- Light: 25-30 lumen beam of light
- Power: 3 x AAA Alkaline batteries recommended
- Diameter of light head: 30mm

13. Installation

SETTING UP:

Insert the black end of the mini multi-texture fibre optic harness into the adapted end of the

torch, as shown below:



Use the Allen key to tighten the screw very carefully at the end of the adapted torch....



until the fibre optic harness is firmly held in place:




OPERATING INSTRUCTIONS:

Power switch (on/off button):

ON - Press once to turn on, power on, and the torch starts with white light


OFF - Press again to turn off, power off.

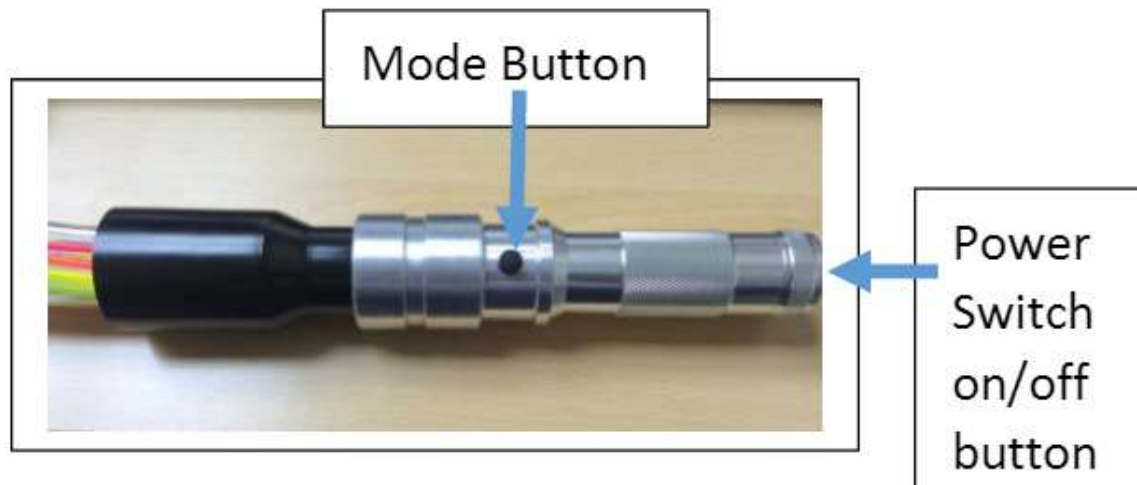

Mode Button:

Press the Mode Button once: Change Mode

Press the Mode Button once to change the light colour. The colour changes each time the button is pressed. After running 10 different single colours, the torch then enters Flash mode (Flash: change colour per second) and with a further button press the torch finally enters Fade mode (Fade: gradual changing through the colours):

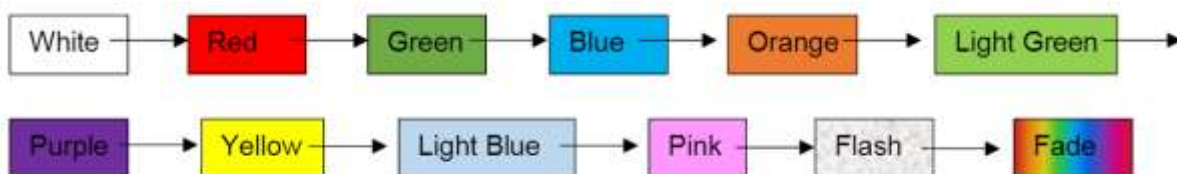

Press the Mode Button for 2 seconds: Flash Speed Mode

Continuously press the button for 2 seconds to enter fast flash mode.

Continuously press the button for another 2 seconds to enter middle-fast flash mode.

Continuously press the button for another 2 seconds to return back to original lighting state.



Example: Torch set on colour red

Press and hold the Mode Button for 2 seconds to make the red light flash quickly.


Press and hold the Mode Button for another 2 seconds to make the red light flash more slowly.

Press and hold the Mode Button for another 2 seconds to return to a static red light.

Press the Mode Button for 4 seconds: Sleep Mode

Continuously press the button for 4 seconds to enter Sleep Mode.

If you wish to turn the light back on, press the button again once. The torch will return to its previous lighting state.

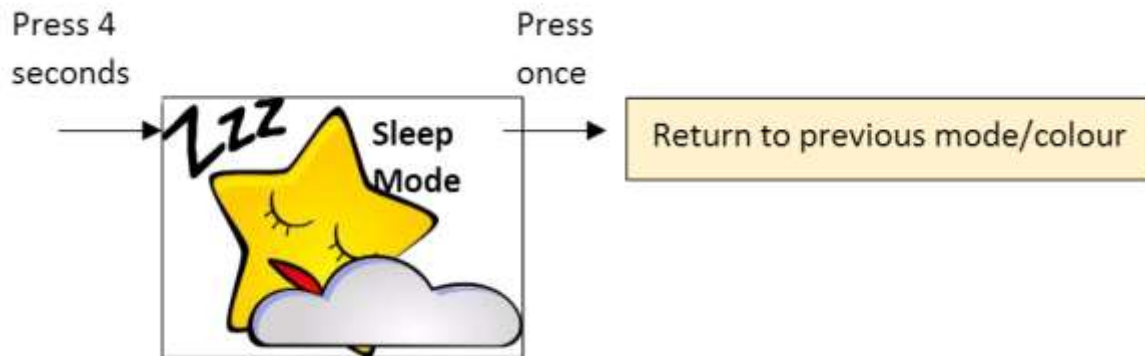

Use the Power Switch (on/off button) if you wish to return to white light.

14. Troubleshooting

Problem: No light

- Ensure that the harness is firmly in place.
- Ensure batteries are inserted correctly and are not drained of power.
- Ensure batteries are inserted the right way around.
- Ensure that the screw is very carefully tightened.

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com