



1. Product Name

Wi Fi Colour Wall Controller

2. Product Code

20259

3. Colour

Black or white

4. Brief Description

Walls awash with colour! Dramatic and striking lighting from one compact unit!

5. Contents

- 1 x 1m wall washer
- 1 x IEC kettle lead with plug
- 2 x wall brackets

6. Snoezelen® Stimulations

- Sight

7. Best Use

This product looks most effective in a darkened environment when used with a ROMPA® Wi Fi controller.

8. Compatible ROMPA® Products

ROMPA® also offers a wide range of Wi Fi controllers, including:



19847 ROMPA® 8 Colour Wire free Controller



21917 ROMPA® Wi-Fi Microphone



18870, 20402 Talking Cubes by ROMPA®



19939 Wireless Interactive Mat Switch Set



19214 – Colour Changing Panel

9. Starting Up


- Install indoors using integral bracket or ceiling mount and appropriate fixings.
- Adjust the angle of the wall washer.
- Plug in.
- The unit enters automatic mode where it will slowly cycle through all the colours.
- Repeatedly press the “MODE” button on the wall washer until the display on the back of the wall washer displays “Addr.” Now repeatedly press the “SET UP” button until the display shows “d.001” (or similar number). Press “UP” and “DOWN” until the display shows “d.001”. Now press the “SET UP” button once. Use the “UP” and “DOWN” buttons to select “03C.H”.
- Use a Wi Fi controller to select a colour.

10. Detailed Description

Walls awash with colour! Dramatic and striking lighting from one compact unit! Provides a flood of colour using ultra bright, low-maintenance LED bulbs. Suitable for indoor use. The light colour can be controlled wirelessly using one of ROMPA's wirefree controllers. Colours can be mixed and their intensity can be adjusted. Easy to install. 240V. Black or white - please state colour choice when ordering.

11. Safety

- Always supervise the use of this product.
- Take all appropriate safety measures to ensure that this product is installed correctly and safely – indoors.
- Do not use if any part becomes damaged.
- Do not attempt to modify this product yourself, or open it up.
- Do not pull on the power cable or exert pressure on it.
- Do not allow the power cable to come into contact with other power cables.
- Do not connect to a dimmer.
- Do not expose to anything flammable, to liquids or to gases

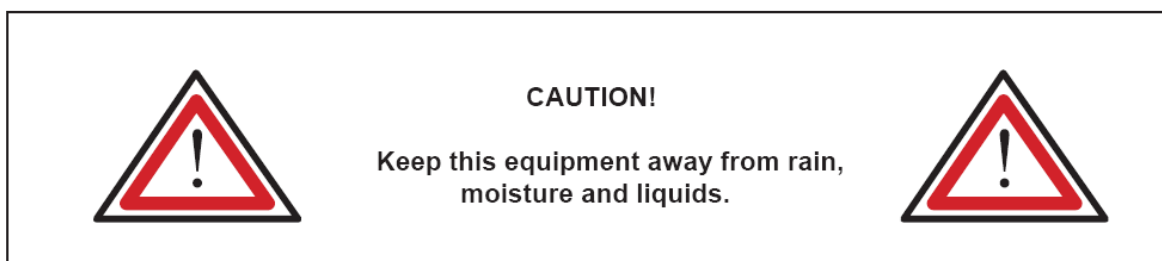

12. Technical Specification

Size: 1mL (1070 x 65 x 88mm)
Power: 240V – 50Hz (mains lead supplied)
Consumption: 50W
Fuse in plug: 13A (UK plug)
Lamp life: 100,000 hours
Weight: 2.5KG
CE: Meets requirements of CE and RoHS

13. Installation

1. Install indoors in dry environments only
2. This product requires one electrical socket.
3. If this product has been exposed to extreme temperatures during transportation, do not switch on immediately. Allow the product to reach room temperature first.
4. Use the integral bracket to wall or ceiling mount this product. There are two holes in each of the two brackets for fixings. Fixings are not included as these depend on the construction of your wall/ceiling.
5. This unit weights approximately 2.5kg. Please take this into consideration when fixing. Please make sure that you are aware of the construction of the wall the unit is to be fixed to. Taking this into account please ensure you have the correct fixings. For example walls may be partition walls and plaster board as opposed to solid brick or stone walls. Take advice from a suitably qualified professional builder or from an estates department if in any doubt about appropriate fixings. Make sure your wall and fixings are capable of holding the weight of this product.
6. Adjust the angle of the wall washer as required by gently pivoting the head containing the LEDs at the brackets. We recommended that the wall washer is pointed towards a wall. The lights are bright and it is not advisable to position the wall washer in such a way that would encourage/allow users to look directly into it.
7. Multiple wall washers can be used together. Only one wall washer is supplied.
8. Plug the wall washer in at the wall.

OPERATION

Plug in. There is no ON/OFF button. This product is not intended to be switched ON and OFF at short intervals.

The unit enters automatic mode where it will slowly cycle through all the colours.

If it receives a Wi Fi signal (transmitted from another Wi Fi enabled ROMPA® device such as a Colour Changing Panel) the unit will change to the corresponding colour sent, for one minute at which it will resume automatic cycling unless another Wi Fi signal is received in this time.

Setting for Wi Fi use

Repeatedly press the “MENU” button on the wall washer until the display on the back of the wall washer displays “dnnn” (nnn is a three digit number).

Now repeatedly press the “UP” and “DOWN” until the display shows “d001”.



Now press the “ENTER” button until the display shows “d-Pn” (n is a digit number).

Now press the “UP” / “DOWN” button until the display shows “d-P2”.

14. Care and Maintenance

- Make sure the Wi Fi Colour Wall Controller is disconnected from the mains (unplugged at the wall) before attempting any installation or cleaning. Pull the plug out by the plug – not by pulling the cable.
- In the unlikely event of product failure, discontinue use immediately.
- This product contains no user-serviceable parts.
- Once this product is eventually exhausted, please dispose of it appropriately.
- Replace plug fuse as required (one in the UK plug).

15. Troubleshooting

Not applicable

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com



1. Naam van het product

Wandstraler - zwart of wit

2. Product Code

20259

3. Kleur

Zwart of wit

4. Korte omschrijving

Zet je muur in de spotlights! Indrukwekkende en opvallende verlichting uit één compacte unit. Geeft een gekleurde lichtstroom door middel van de ultrasterke, weinig onderhoud vragende LED lampjes.

5. Inhoud

- 1 x 1 meter wandstraler
- 1 x stroomkabel
- 2 x muurbeugels

6. Snoezelen Stimulaties

- Zicht

7. Algemeen

Dit product is in een donkere ruimte het meest effectief. Het is speciaal aangepast voor ontvangst van WiFi. Reageert op Rompa interactieve WiFi schakelaars zoals 8-knoppen schakelpaneel en pratende kubus bijvoorbeeld. Werkt tevens met Sensory Magic samen. Programmeren is niet nodig. Kan bediend worden door een externe DMX controller. Met een afzonderlijke modus voor passieve kleurverandering. Inclusief een stemreagerende modus. Instelbare snelheid. Alleen geschikt voor binnenshuis gebruik.

8. In gebruik nemen

- Binnenshuis installeren met bijbehorende beugel of plafondmontage en passende bevestigingsmiddelen.
- Stel de hoek van de wandstraler in.
- Doe de stekker erin.
- Stel het apparaat in, zodat de kleuren automatisch langzaam overlopen.
- Blijf op de 'mode' knop drukken tot het schermje op de achterzijde van de wandstraler 'Addr' laat zien. Druk nu herhaaldelijk op de 'set up' knop tot het scherm 'd.001' laat zien (of een soort gelijk nummer) druk 'up' en 'down' tot het scherm 'd.001' laat zien. Druk nu één op de 'set up' knop. Gebruik de 'up' en 'down' knoppen om '03C.H' te selecteren.
- Kies met de WiFi schakelaar de kleur

9. Veiligheid

- U moet altijd toezicht houden als het product gebruikt wordt.
- Gebruik het apparaat niet als er een onderdeel beschadigd is.
- Pas zelf geen wijzigingen aan het product en maak het niet open.
- Houd rekening met alle veiligheidsmaatregelen om ervoor te zorgen dat dit apparaat correct en veilig binnenshuis is geïnstalleerd.
- Niet trekken aan de stekker.
- Geen druk uitoefenen op de stekker.
- Sluit het apparaat niet op een dimmer aan.
- Stel het apparaat niet bloot aan vloeistoffen, gassen of brandbare middelen.
- Laat de stekker niet in contact komen met andere stroomkabels.



LET OP!!!

Houd het product weg van regen, vocht en vloeistoffen.



10. Technische informatie

Afmeting:	1070 x 65 x 88mm
Voltage:	240V – 50Hz
Aantal watt:	50W
Zekering:	13A
Branduren van de lamp:	100 uur
Gewicht:	2,5kg
CE:	CE en RoHS

11. Installatie

1. Installeer het apparaat alleen in een droge omgeving.
2. Dit apparaat vereist een stopcontact.
3. Indien dit product is blootgesteld aan extreme temperaturen tijdens het transport, niet meteen inschakelen. Laat het product eerst de kamertemperatuur bereiken.
4. Gebruik de integrale beugel van dit product. Er zijn twee gaten in elk van de twee beugels voor de bevestigingsmiddelen. De bevestigingen zijn niet inbegrepen, omdat deze afhankelijk zijn van de bouw van de muur.
5. Het product weegt 2,5 kg. Gelieve hiermee rekening houden bij de vaststelling van het product. Zorg ervoor dat u zich bewust bent van de bouw van de muur waar het apparaat aan vastgesteld moet worden. Het kan bijvoorbeeld een scheidingswand of gipsplaat zijn wat heel anders is dan een massieve bakstenen muur. Zorg voor het juiste bevestigingsmateriaal. Zorg ervoor dat uw muur en het bevestigingsmateriaal in staat zijn om het gewicht van het product te kunnen verdragen. Bij twijfel kunt u beter contact opnemen met een professional.
6. We raden aan de wandstraler naar een muur te richten. De lichten zijn helder en het is niet aan te raden de wandstraler op een zondanige wijze te plaatsen dat de gebruikers er direct naar kijken.
7. Er kunnen meerdere wandstralers samen gebruikt worden. Er wordt een wandstraler geleverd.
8. Doe de stekker in de wandstraler.

De werking van het product

Sluit de stekker aan. Er verschijnt een on/off teken. Dit product is niet bedoeld om meerdere malen aan en uit te zetten met korte tussenpozen. Het product komt in de automatische modus, waarin de kleuren langzaam zullen overlopen. Indien de wandstraler een WiFi-sigitaal oppakt (van een ander Rompa WiFi product die aanstaat, zoals een kleurenpaneel) zal de wandstraler automatisch deze geselecteerde kleur overnemen. Na 1 minuut gaat de automatische cyclus het weer overnemen, tenzij er een ander WiFi-sigitaal in deze tijd overgenomen wordt.

Installeren voor WiFi gebruik

Druk herhaaldelijk op de knop 'MENU' tot er op het scherm 'dnnn' komt te staan (n een getal is).

Daarna herhaaldelijk de knop 'up' en 'down' in tot er op het scherm 'd.001' komt te staan.



Druk nu de 'ENTER' knop in. Gebruik de 'up' en 'down' knoppen om 'd-Pn' te selecteren (n een getal is).

Gebruik de 'up' en 'down' knoppen om 'd-P2' te selecteren.

12. Verzorging en onderhoud

- In het onwaarschijnlijke geval van een productiefout stop dan onmiddellijk het gebruik.
- Dit product bevat geen onderhoudsvrije onderdelen.
- Als het product uiteindelijk niet meer bruikbaar is, dient u het product op de juiste manier weg te gooien.
- Vervang de zekering zoals vereist.
- Zorg ervoor dat de WiFi schakelaar wordt losgekoppeld van het stopcontact voordat u de installatie of reiniging begint. Trek de stekker eruit en trek dan niet aan de kabel.